


Installation Instructions for Kuehn Bevel Decorative Bevel Edge Molding

Step 1

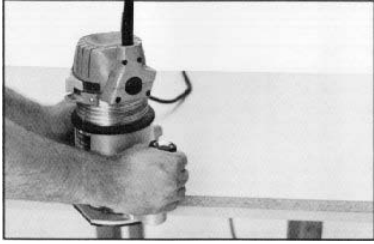


Laminate Deck and finish trim with router and straight edge.

Step 2




Pre-cut Kuehn Bevel molding longer than edge to be covered, using a 60 tooth or greater laminate blade in trim saw or table saw.

Step 3

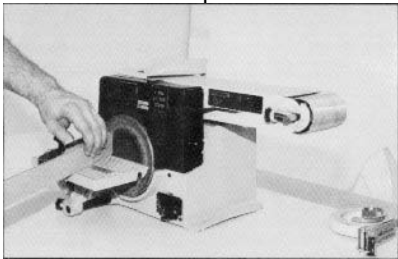


Fit molding, sand in miters and joints with disc sander equipped with niter fence.

Step 4

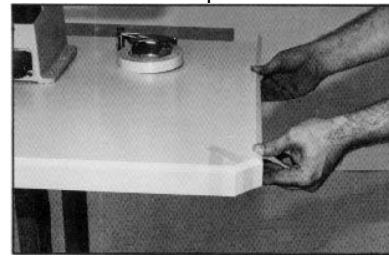


Pre fit all pieces prior to gluing.

Step 5

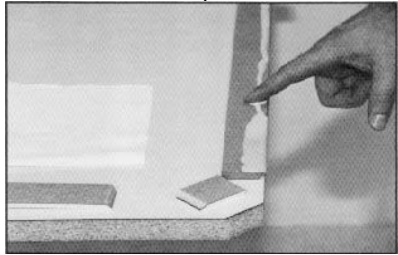

Spread carpenters glue over the ENTIRE back surface of molding to assure a good watertight seal.. Be sure to adequately cover back of bevel laminate. (DO NOT USE CONTACT CEMENT)

Step 6

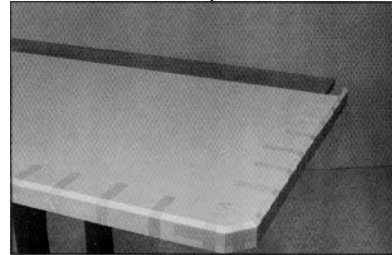


Affix molding using filament tape every 2" -3". Align top edge of molding precisely with top edge of laminate while taping. Wipe excess glue that squeezes out. Let glue dry before removing tape. Scrape off excess glue when tape is removed. (Filament tape is recommended, masking tape tends to tear when applying)

Step 7



Lightly sand top edge of molding where it meets the countertop with 220 Tri mite sandpaper to clean up any burrs that may be left. Be sure not to sand through the color surface of the laminate.

Step 8

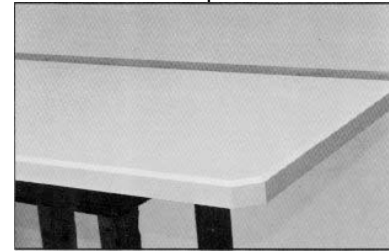

It's that easy to install KUEHN Bevel Edges!

1-800-TO BEVEL
1-800-862-3835

Important Note: It is recommended that after installation of the countertop the area above and near the dishwasher should be sealed with a waterproof sealer to defray steam or moisture damage due to improperly sealed dishwasher doors.